

Canon G6

Camera Options Configuration:

| Option* | Set to: |
|---------------------------------|----------------------|
| FUNCTION OPTIONS | |
| ISO Speed | 50 or 100 |
| Effects | Off |
| BKT | Off |
| Flash Output | N/A |
| Image Quality | Fine or Superfine |
| Image Size | L (3072 X 2304) |
| CAMERA EXTERNAL SETTINGS | |
| Flash | Off |
| Light Metering | Center-weighted spot |

*Settings omitted here can be left at factory defaults or set to user's preference.








IPIX and the IPIX logo are trademarks or registered trademarks of IPIX Corporation.

Canon G6

Normal Shooting Method

Make sure the Camera Options match those shown on the other side of this card before starting.

| | |
|--|---|
|  | Place the camera in Manual Mode by rotating the mode dial to the M position. |
|  | Make sure the lens is zoomed to the widest setting by pressing the minus magnifying glass zoom button. |
|  | Press the flash button until the flash is disabled . Press the metering button until center-weighted spot is selected. |
|  | Press the WB button and set the white balance to a setting that suits the scene (preferred) or to automatic (optional). |
|  | Use the main dial to set the camera's aperture to f8.0 . Always use this setting or blurry, dark seams may result. Use the main dial to adjust the camera's shutter speed for proper exposure. See pg. 87 in the G6 Camera User Guide for more assistance with this function. |

Take picture 1. Rotate camera and take picture 2.



**For technical support:
Contact IPIX at 888-909-4749**